 


AUDI R8 SPYDER

OFFICIAL LICENSED ELECTRIC RIDE-ON

USER MANUAL

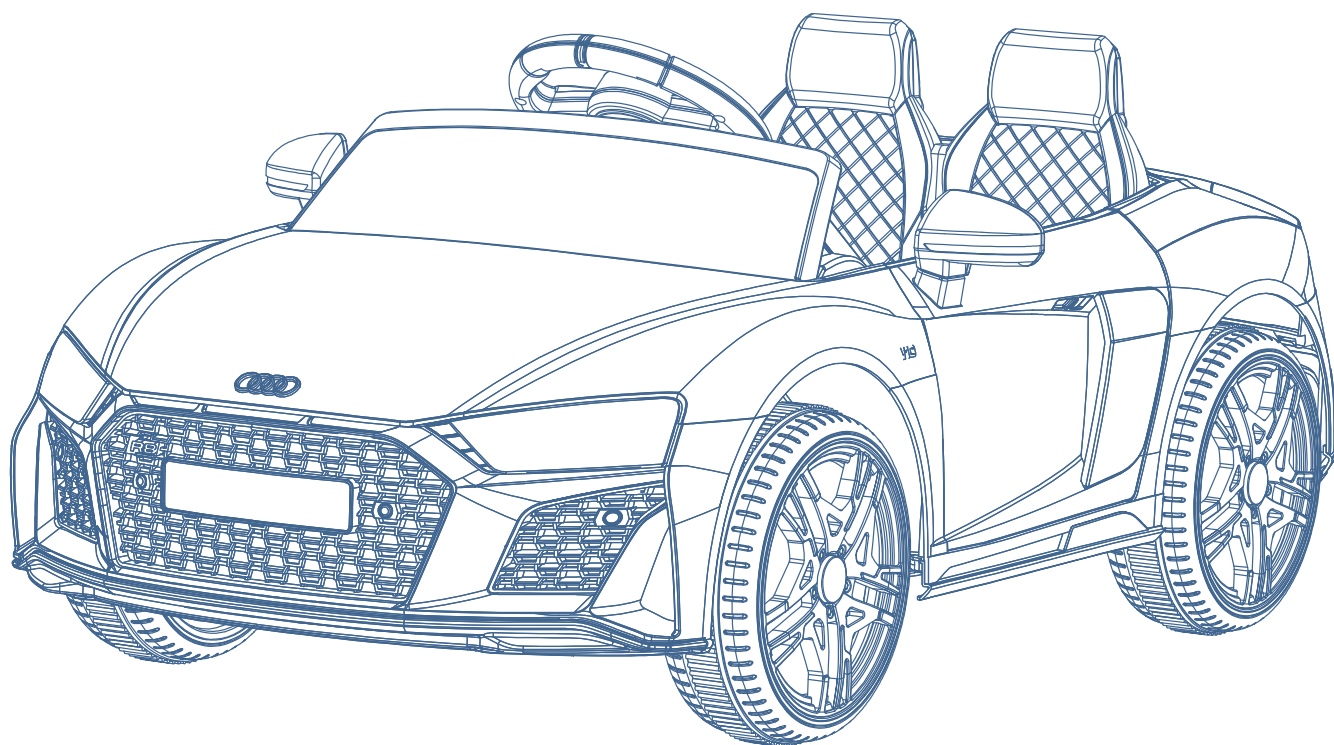




- ◆ Please read the manual carefully before assembling.
- ◆ Preserve the manual for further reference.



1. SPECIFICATION

Motor	6V390#*1 / 12V380#*2	Suitable Age	3 years+
Battery	6V4.5AH / 12V4.5AH	Maximum Loading Capacity	25KGS
Item size	106*60*41 CM	Charging time	8-12 hrs

2. PARTS LIST

No.	Parts. Name	QTY	No.	Parts. Name	QTY
①	Body	1	②	1-touch Assembling Wheel	4
③	Steering Wheel	1	④	Windshield	1
⑤	Rearview Mirrors	2	⑥	Seat	1
⑦	Supporting Wheels	2	⑧	Charger	1
⑨	Remote Control 	1	⑩	MP3/AUX Cord 	1
⑪	User Manual 	1			



3. ASSEMBLING

 
WARNING!

- Adult assembling only.
- Choking hazard might cause from small parts, keep children under 3 years away.
- Dispose the plastic bags carefully, children might be suffocated by playing it.

Assembling Steps:


A: Install the wheels

turn the car upside down, keep pressing the button in the middle of the wheel, aim to the axle and push down to the end, stop pressing and pull off the wheel until you hear a “click” sound.

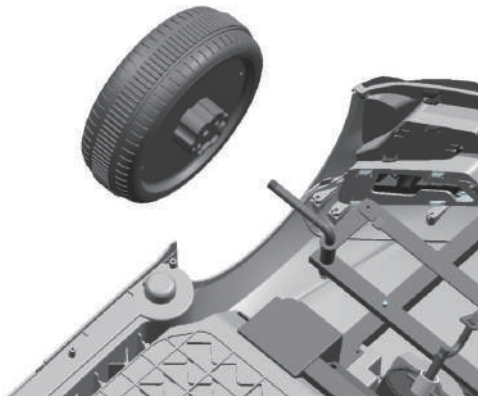


B: Install supporting wheels

 shown as the picture below.

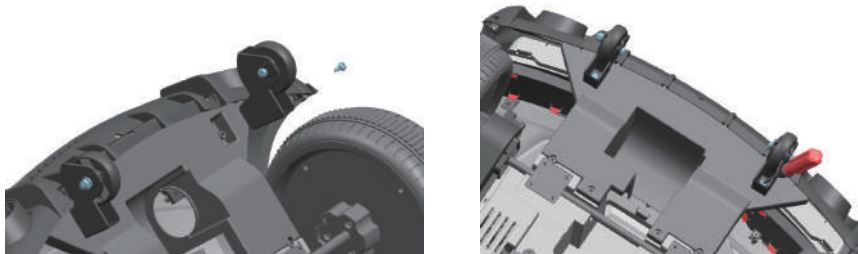


C: Battery wires connection

 Plug the functional wires (pic 1). Connect the battery wires by color to color(pic 2). After the connection, please hit the power button to turn on the car, so as to confirm the power supply works, you will hear the engine sound.

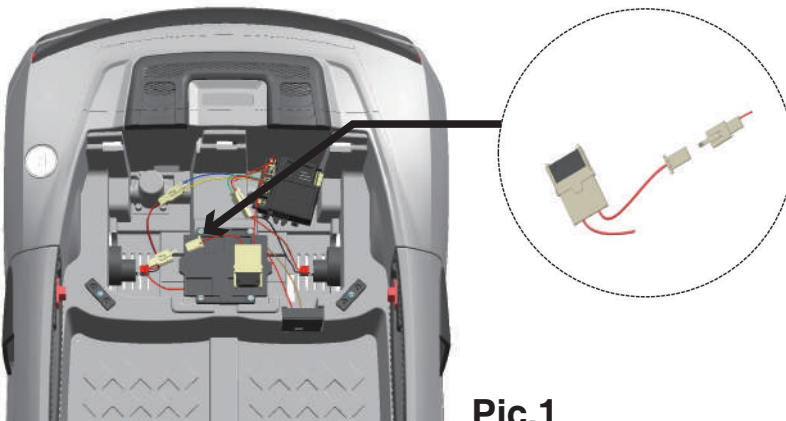

Pic.1

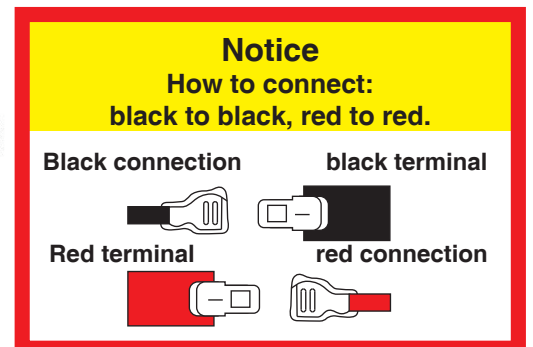 

Pic.2

D: Have the seat fixed

(Parts like remote control or charger might be put into the baseplate temporary for better protection, please take them out before installing the seat) Have the seat positioned, make sure the clasp joint insert to the holes on baseplate. When position adjusted correctly, the screw holes of the seat would match the baseplate's, finally tighten the screws.

 


E: Install steering wheel

Plug the wire of steering wheel to the car's. Test the horn and music button to confirm the connection works.



Push down the steering wheel on the steering bar (correct position—horn left, music button right). Aligning the hole that for the bolt to get through, insert the bolt and finally tighten it.

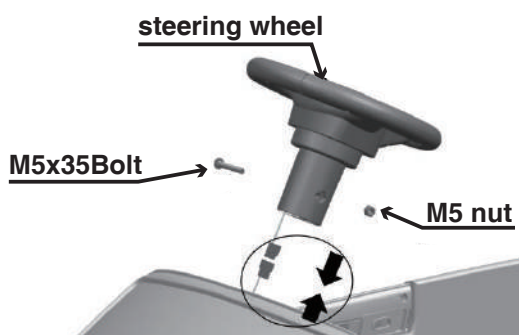


F: Install the windshield and rearview mirror.




4. FUNCTION DESCRIPTION

 (1)

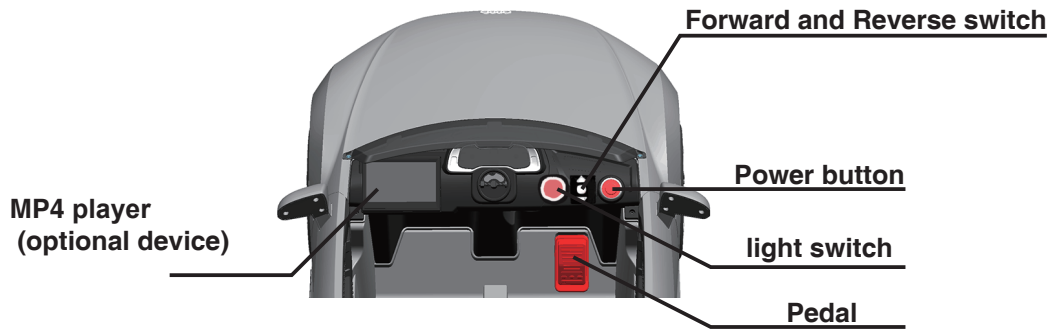

 (2)MP4 is an optional, it is colorful display and touch-screen.

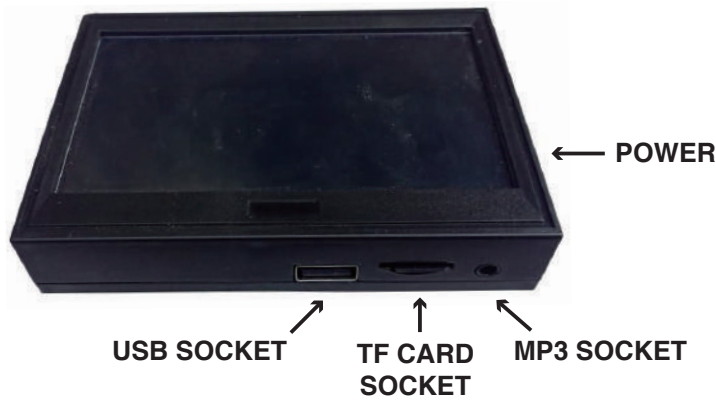

(3)Multi-functional player



 
optional function

This player can be selected Bluetooth configuration.



1. USB socket.
2. TF card socket.
3. AUX socket: connect MP3 device or mobile.
4. Education/V -: press=education, long press=Volume down.
5. Story/pause & play.
6. Music/V+: press=music, long press=Volume up.
7. Song or Mode button: shift between Song or Bluetooth to MP3/USB/TF mode.
8. Display panel.

5. REMOTE CONTROL

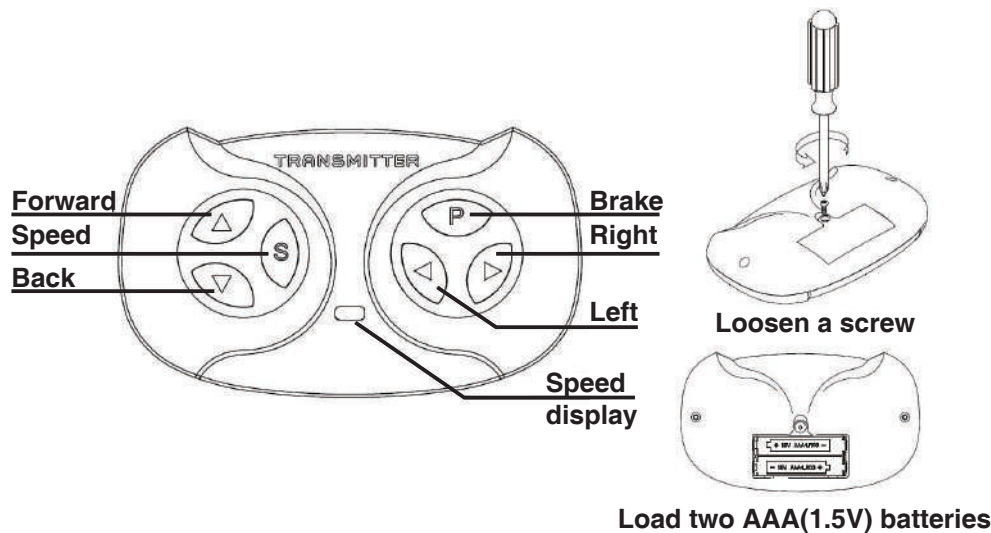

Matching Code Steps

1. Loosen the screw on the back cover.
2. Load 2 pcs AAA (1.5V) batteries. *(AAA batteries are not supplied)*
3. Power off the car.
4. Match code: keep pressing the **Forward** and **Back** buttons at the same time until the **Speed display** light flickering, now turn on the car and will see the **Speed display** light stops flickering, which means matching code succeed. Now parents can control the car by remote control.

Forward—car moves forward

Back—car reverses

Speed—adjust the speed

Left—turns to the left

Right—turns to the right

 
Brake—keep the car in brake state.

Remote control priority: when remote control is operated, pedal will be invalid for children's safety.

6. CHARGING

Use specific charger offered only. Charge the car in dry and well-ventilated places.

Please charge 8-12 hours for first time using. When Charging, all functions will be cut off.

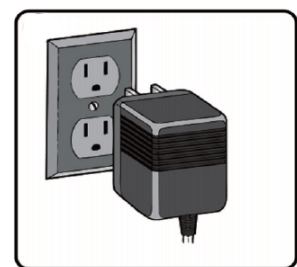

7. DRIVING ALERT

Don't drive in below areas:

1. On grass, by the river, uneven road, or slope area.
2. Public road and crowded area.
3. At night or dark place.
4. In raining or snowing day.



Flat road condition driving only.



No driving on grass.

To avoid fuse malfunction, please:

1. Don't load over 25 kg.
2. Don't drag anything by the car.
3. Don't pour and wash the car by water or strong chemical liquid.

8. TROUBLESHOOTING

Trouble	Check if
1. The car does not move	1) Check the battery if it is full of power or charged for 9-10hours after using.
	2)The sockets of the power button and controlling board under the seat, the battery plugs are working.
	3) The over-current protector automatically disconnects the circuit (when the car is over loaded or blocked, the over-current protector automatically disconnects the circuit to protect the motor and controlling board).
	4) The car is left unused for a long period of time and the battery does not charged on time.
2. Horn or music sounds are not working correctly	The battery is full of power, otherwise the battery needs to be charged or replaced.

9. WARNING

1) BATTERY WARNING

- 1.If the car is left unused for a long period of time, remember to charge the battery to full power and turn off the power button then store the battery up. And recharge the battery every one to prolong the life-span of the battery.
- 2.Pay attention to the +/- polarity (Batteries are to be inserted with the correct polarity; The supply terminals are not to be short-circuited).

2) CAR WARNING

1. Some possible sharp edge, cuspidal points or small parts may be on the toy before assembly, so the toy should be assembled by adult.
2. To avoid suffocation, remove all packaging material after product assembly.
3. Children should ride the car properly with adult's guidance and instructions, otherwise children themselves or others may be hurt.
4. This product must only be used on a flat level surface. Do not use it on a public road or near dangerous areas such as step, uneven ground, water etc. Otherwise, it may cause traffic accident or drowning hazard.
5. It is recommended that children always wear shoes and other protective clothing and equipment (e.g. safely belt, helmet, gloves, kneepads etc.)
6. Some small parts may be fallen caused by improper use, so this product is not suitable for children under 36 months old.
7. Regular examination of battery charger for any damage to their cord, plug, enclosure and other parts, and they must not be used until the damage has been repaired.
8. This car must only be used by a single child, maximum load 25kg. No overload running.
9. Keep away from fire.
10. These instructions contain important information, please retain them after product assembly.

3) REMOTE-CONTROL BATTERY WARNING

1. Non-rechargeable batteries are not to be recharged (for controller).
2. Different types of batteries or new and used batteries are not to be mixed (for controller).
3. Exhausted batteries are to be removed from the toy (for controller).
4. Rechargeable batteries are to be removed from the toy before being charged (for controller).
5. Rechargeable batteries are only to be charged under adult supervision (for controller).

WARNING!

To reduce the risk of injury, adult supervision is required.

Strictly forbidden using on the roadways, near motor vehicles, slopes, swimming pools and where there is water; Only used by 1 rider who wearing shoes.

Protective equipment should be worn, not to be used in traffic.

Keep away from kids before assembled by adult, as there are potentially sharp edges, points, or small parts.

The vehicle must be used with caution since skill is required to avoid falls or collisions causing injury to the user and third parties.

Officially Licensed by AUDI AG 

Official Licensee: FERRERA & FERRERA S.R.L.

Sole Worldwide Distributor: GUANGDONG OVERSEAS CHINESE (OCIE) ENTERPRISES CO., LTD
GUANGZHOU MEGAPLUS CO., LTD